
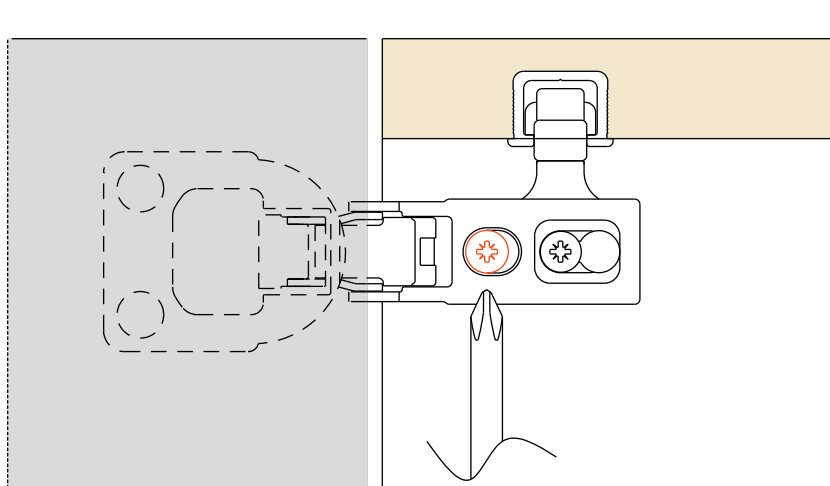


Calibrated height adjustment

Height adjustment of hinges assembled with the sliding components is achieved through a cam. Through this alignment a parallel movement of the component in the track is achieved. The result is a smooth movement without any binding.

ATTENTION! The sliding block does not have a load-bearing function. Therefore it must slide freely inside the track.


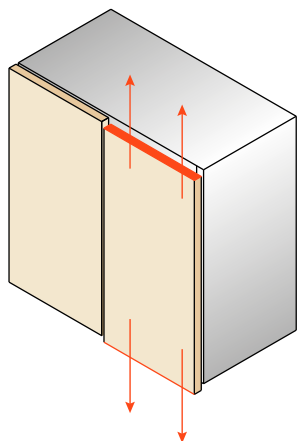


+2 mm -2 mm



Depth adjustment

Depth adjustment of the hinges mounted on the sliding component is achieved through the fixing screw of the same hinge.

Depth adjustment should be made in conjunction with the hinges mounted on the opposite door. This adjustment is useful to keep the “L” value constant all along front of the furniture.

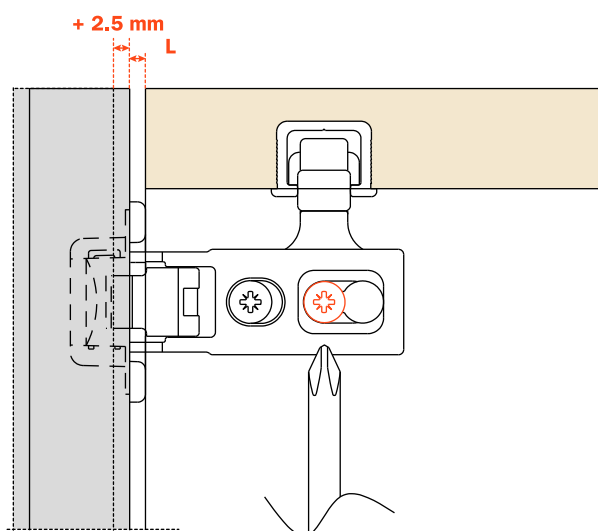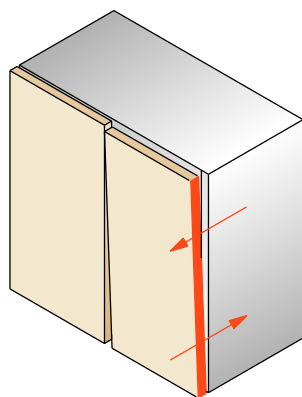

+2.5 mm

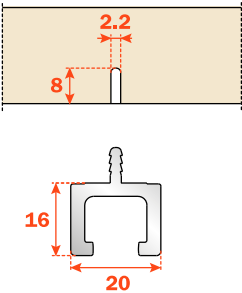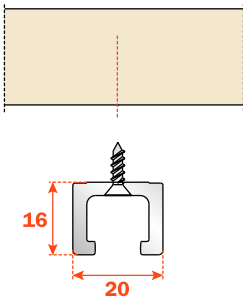
	barb-fixed	screw-on B 3.5 DIN 7982
		
Colours		
white	F1GIA1.....	F1GFA1.....
black	F1GIA3.....	F1GFA3.....
grey	F1GIAG.....	F1GFAG.....
beige	F1GIAP.....	F1GFAP.....

Standard lengths available: 590 mm, 880 mm, 1180 mm. Non-standard lengths can be supplied subject to a minimum order quantity of 900 pieces. The required length should be expressed in millimetres in the last four digits of the product code occupied by the dashes.


Mount the hinges of the fixed door on to the mounting plates on the cabinet side.
We recommend the use of Salice hinge part number C2A6A99 110° with BAR3R mounting plate or similar.



Position the sliding block inside the track by rotating it 90°.

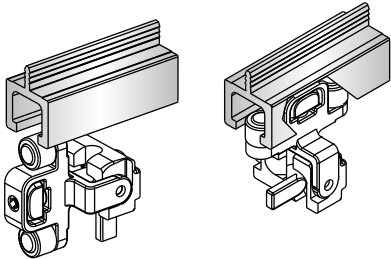


Lock the sliding block into position by turning the marked in orange lever.

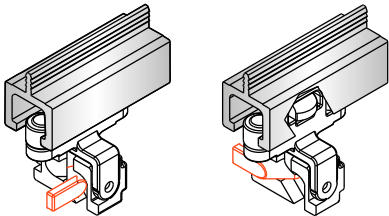

Application into the top of the cabinet and doors Solution with plastic track barb-fixed or screw-fixed

Drilling distances without finger-protection strip

To facilitate the assembly of the doors on the cabinet, it is preferable to premount all the hinges.

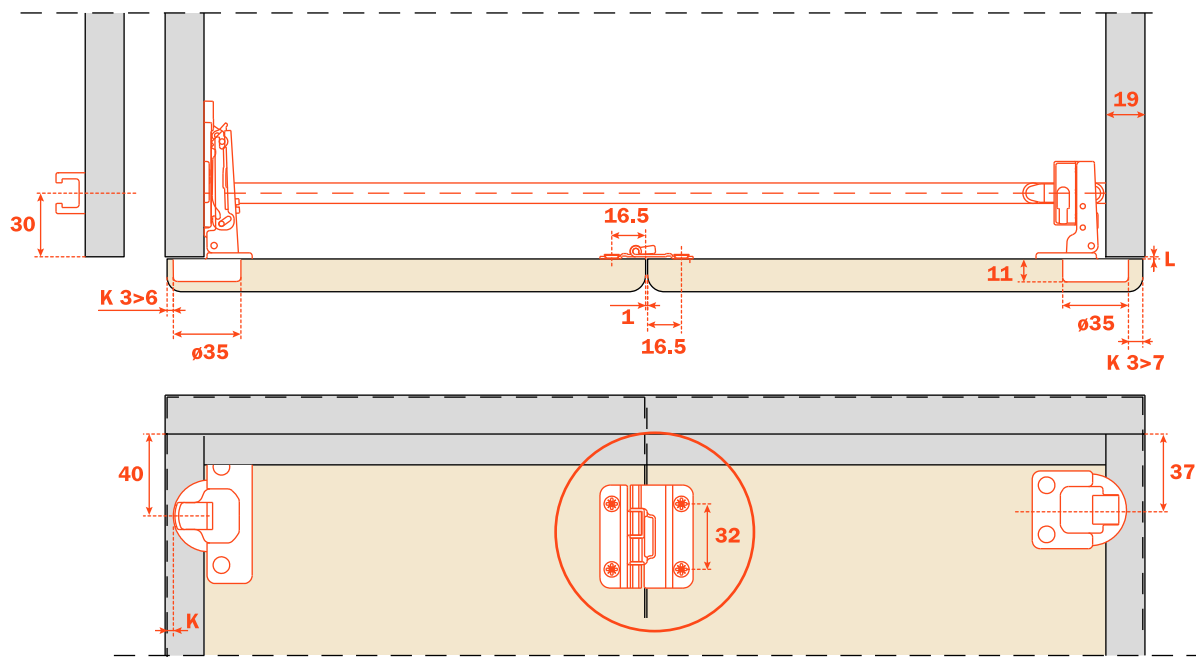


Central assembly:

- narrow part to be mounted on the door which is fixed to the cabinet side;
- wider part to be mounted on the moving door.

Drilling distances with finger-protection strip

To facilitate the assembly of the doors on the cabinet, it is preferable to premount all the hinges.

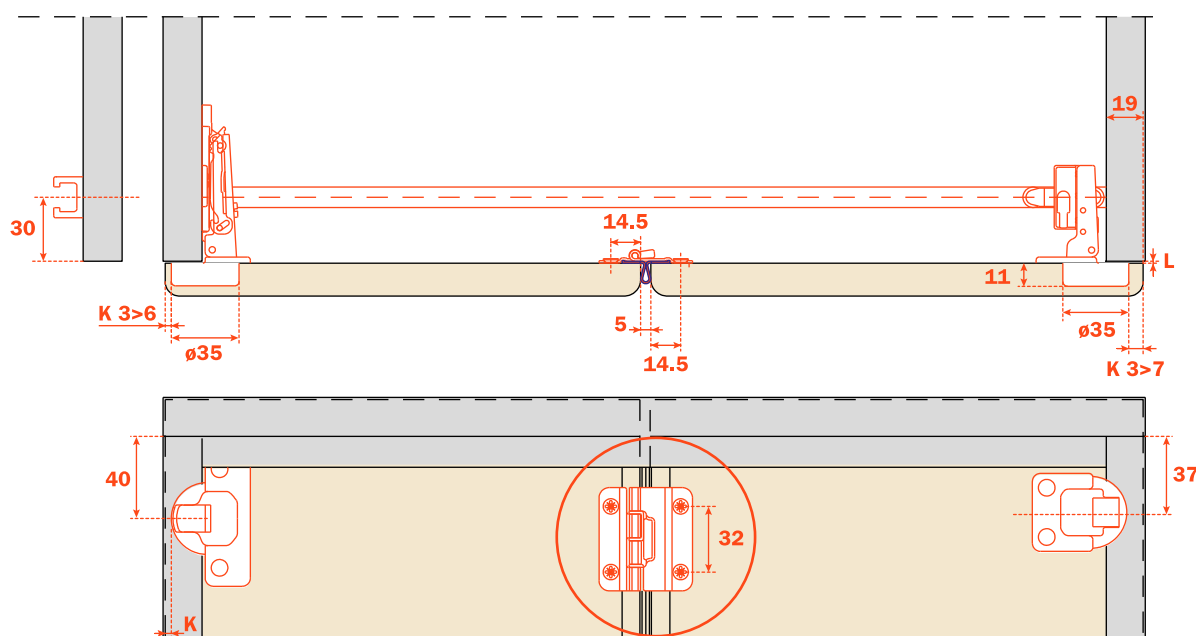

Central assembly:

- narrow part to be mounted on the door which is fixed to the cabinet side;
- wider part to be mounted on the moving door.