


Instruction Menu


Note:

- 1.Please read this instruction carefully before install.
- 2.For cabinet width 900mm,inner height more than 600mm.
- 3.This instruction is for left side,right side is symmetrical.

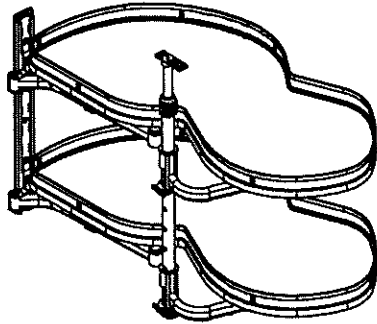

Accessories


A 1 PcS




B 1 PcS



C 1 PcS



D 2 PcS



E 6 PcS




F 10 PcS



G 2 PcS



H 2 PcS

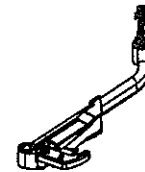


I 2 PcS




J 1 PcS



K 2 PcS





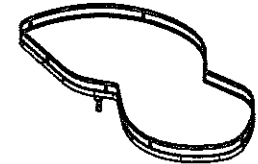


2.Specification and suitable cabinet size:
(Door opening angle $\geq 90^\circ$)

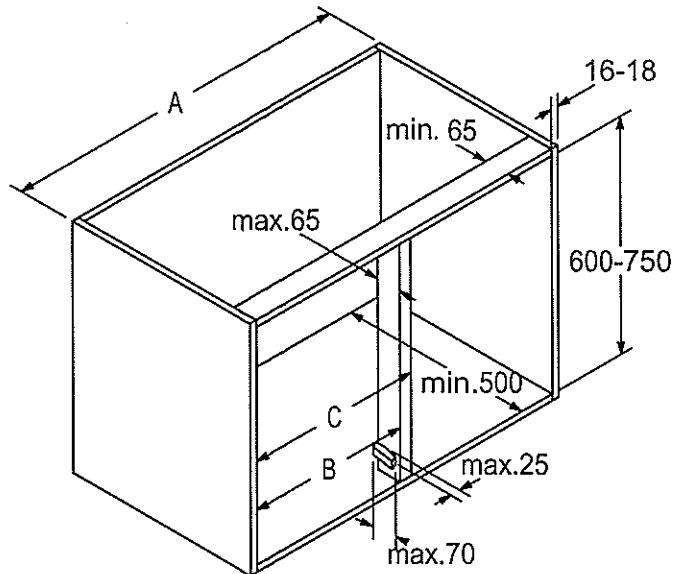


3.Punch holes as the drawing.


Size	A	B	C
Door W	900	411-418	Max450

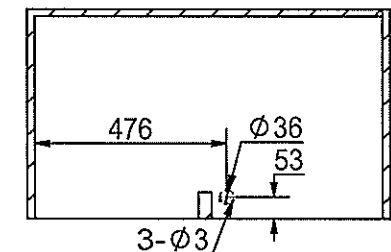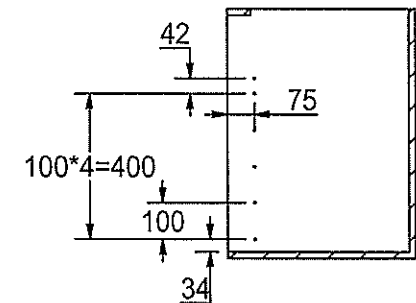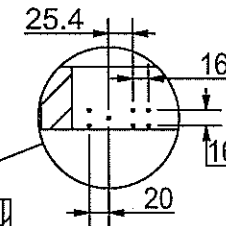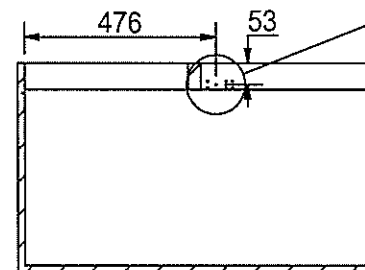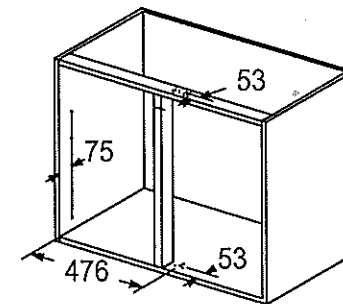


4. Fixing parts "I" with screw "E", fixing parts "A" to top and "B" to bottom with screw "F".

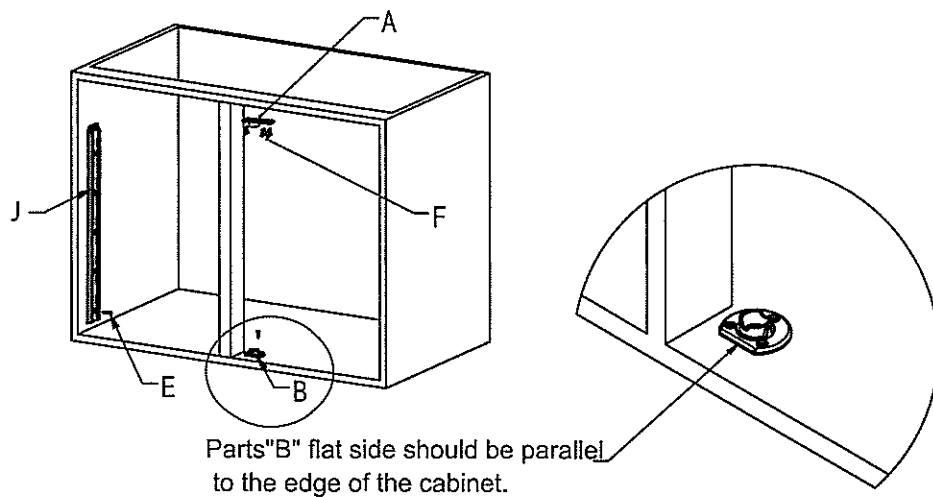

5. Fixing Parts "D" into Parts "C" then insert it into parts "B". Adjusting Part "C" to suitable height and lock it.

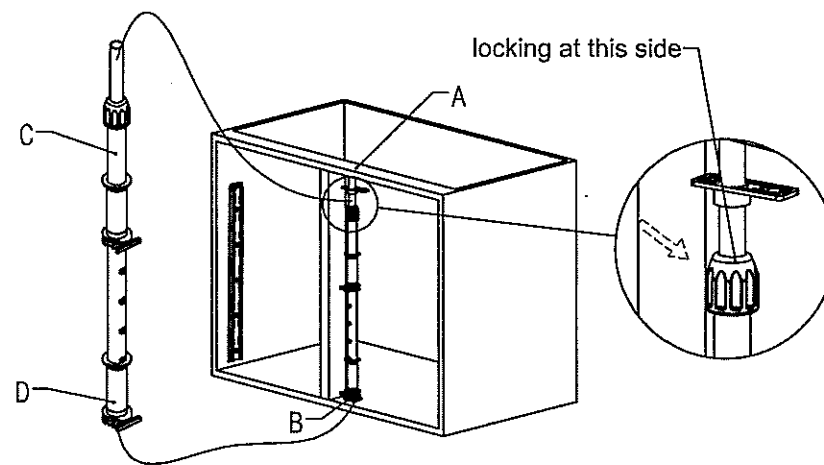

6. Put parts "I" into "H", then mounted into parts "J", part "G" mount into part "D". Install the basket "K" as drawing.

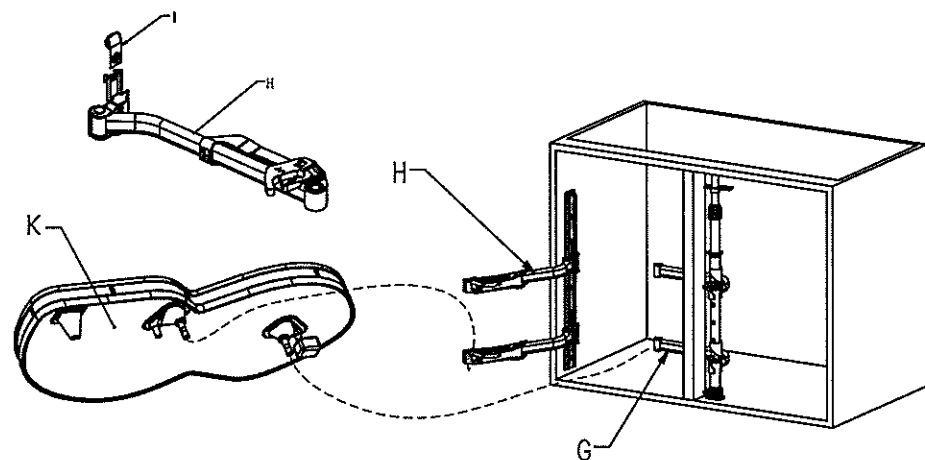

7. Installation completed.

